

DECK REMOVAL NOTES:

DEMOLISH DECK STARTING AT PIER 3, WITH ONE DEMOLITION OPERATION PROCEEDING TOWARD EACH ABUTMENT.

FALL PROTECTION IS PROVIDED BY SUBDECKING AT BAYS AND OVERHANGS. IF SUBDECKING IS NOT CONTINUOUS, PROVIDE CONCRETE DEADMEN AND CABLE HORIZONTAL LIFELINES FOR WORKERS WHERE FALL HAZARD EXISTS. PROVIDE A CONTROL LINE AT ABUTMENTS, AND TEMPORARY HANDRAILS AS REQUIRED AT WINGWALLS.

INSTALL PLASTIC SHEETING INSIDE SUBDECKING OVER ROAD, SIDEWALK, AND STREAM, TO CONTAIN SAWCUT SLURRY.

BEFORE SAWCUTTING DECK, DEMOLISH A SMALL SECTION TO DETERMINE CONNECTOR LOCATIONS. LAY OUT SAWCUTS SO AT LEAST OF 2" SLAB WIDTH BEARS ON THE GIRDER FLANGE (TYP LAYOUT SHOULD BE ABOUT 3" TO BREAK FREE OF SHEAR SPIRALS).

DEMOLITION EQUIPMENT ON DECK DURING DECK REMOVAL (2 SETUPS NEEDED):
 SAWCUT SUBCONTRACTOR TO PROVIDE SAWS AND RELATED EQUIPMENT
 CAT 324 OR 329 EXCAVATOR, WITH SCRAPER FOR PAVEMENT, HOE RAM, AND SLAB CRAB
 SEMI TRACTOR WITH 48' FLATBED TRAILER


GENERAL SEQUENCE FOR DECK REMOVAL, PER SPAN:

- 1) REMOVE PAVEMENT AND MEMBRANE
- 2) TRANSVERSE SAWCUTS
- 3) CHIP CONCRETE ON OVERHANGS AS NEEDED TO COMPLETE TRANSVERSE CUTS
- 4) INTERIOR LONGITUDINAL CUTS
- 5) LONGITUDINAL CUTS ALONG EXTERIOR GIRDERS, REMOVING OVERHANG SECTIONS AS THEY ARE CUT FREE (SEE DETAIL).
 OPTIONALLY, MAY LEAVE CUTOFF SECTIONS RESTING ON OVERHANG SUBDECKING UNTIL REMOVAL.
- 6) CHIP OUT DECK NEAR DIAPHRAGMS TO ALLOW ACCESS FOR EXCAVATOR AND TO INSTALL X-BRACES.
- 7) DEMOLISH CONCRETE DIAPHRAGM AT START OF SPAN, AND END OF PREVIOUS SPAN, BY SAWCUTTING AND CHIPPING
- 8) REMOVE INTERIOR SAWCUT PANELS
- 9) CHIP CONCRETE REMAINING ON FLANGES ONTO SUBDECKING, AND CUT OFF SHEAR CONNECTORS.


KEEP EXCAVATOR TRACKS IN FULL CONTACT WITH THE DECK.

EXCAVATOR AND TRACTOR-TRAILER ARE TO PULL UP ALONGSIDE EACH OTHER, WITH SEPARATION AS SHOW IN SECTION. LIMIT TRAVEL SPEEDS ON CUT DECK TO 5 MPH.


TRAILER MAX LOAD IS 60,000 LB EVENLY DISTRIBUTED (THIS IS 80 BAY-FEET OF SLAB AT 750 LB/FT, +/-)

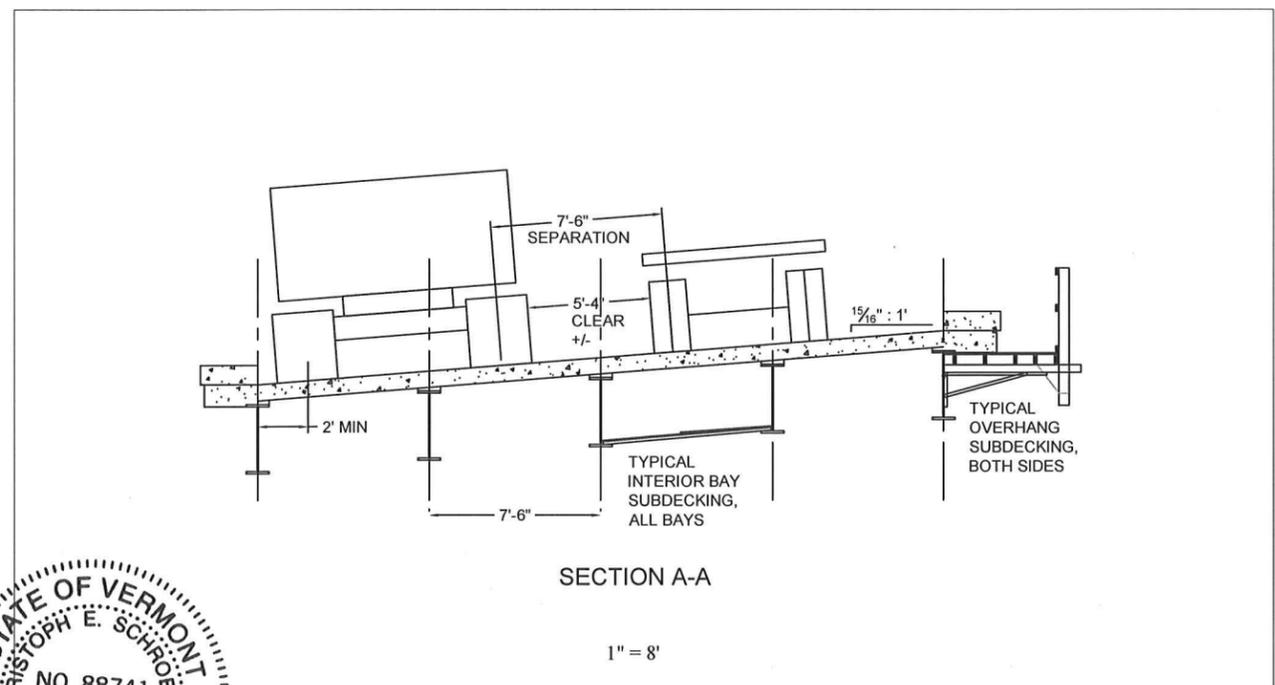


REV:	TITLE: DEMOLITION PLAN - SEQUENCE
	PROJECT: WATERBURY IM 089-2 (43)
	SCALE: 1" = 16'
	DATE: FEB. 13, 2015
	BECK & BELLUCCI, INC. FRANKLIN, NEW HAMPSHIRE

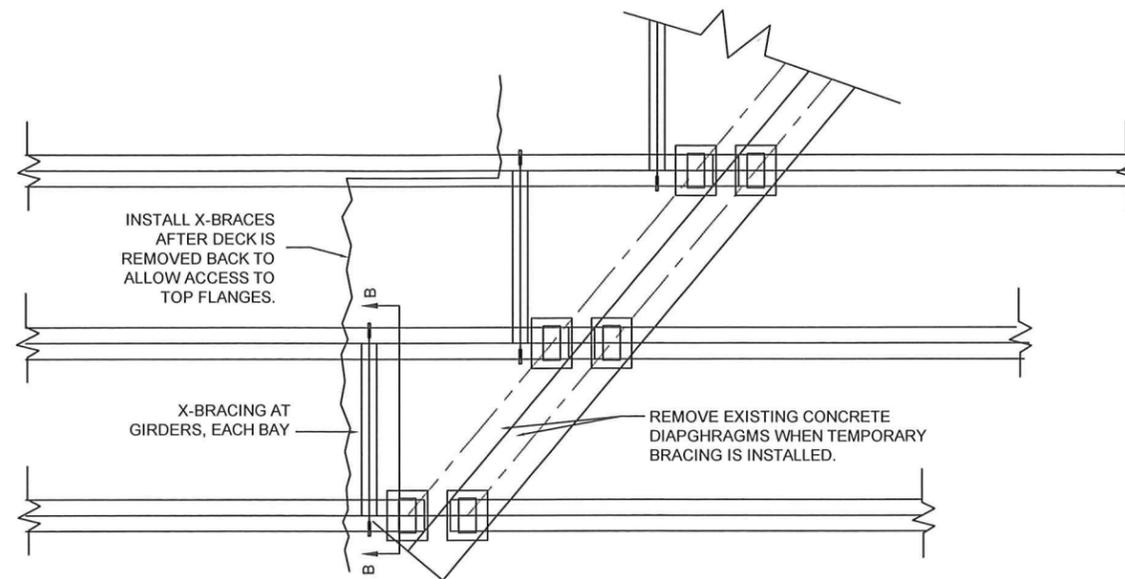

TEMPORARY DIAPHRAGMS FOR DECK REMOVAL

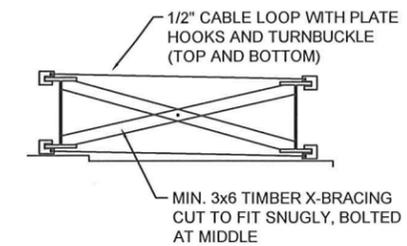


LATERAL BRACING DETAIL SEC. B-B, SEPARATE X-BRACING IN EACH BAY

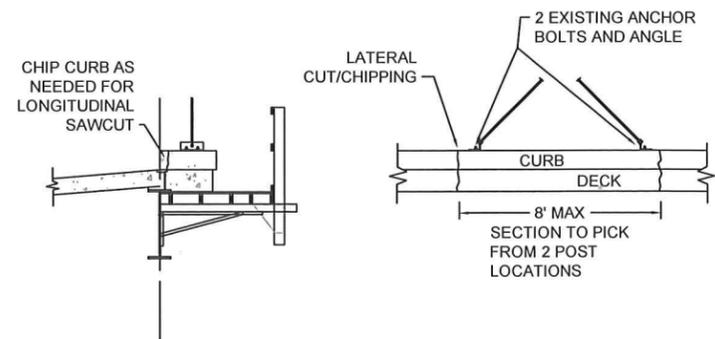


REMOVE MAX. 8' LONG OVERHANG SECTIONS (5,200 LB)
 REMOVE RAIL AND POST BEFORE PICKING, OR ATTACH STRAPS ONTO POSTS.
 MAKE LONGITUDINAL OVERHANG CUTS LAST, TO LET EXCAVATOR PICK SECTIONS AS THEY ARE CUT LOOSE.
 IF POSTS ARE REMOVED, BOLT DOWN LIFTING HARDWARE TO MIN. 4 BOLTS (2x2 POSTS OR 4x1 POST)

OVERHANG SECTION REMOVAL

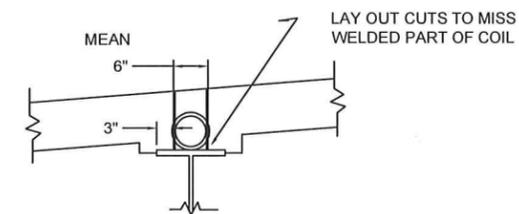

LONGITUDINAL SAWCUT LAYOUT (NTS)

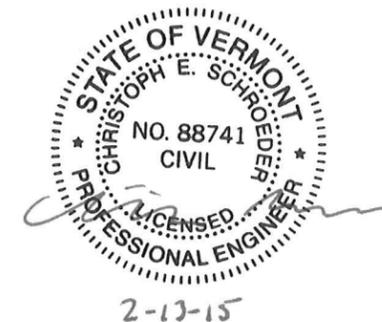

REV:

TITLE: DEMOLITION PLAN - DETAILS	
PROJECT: WATERBURY IM 089-2 (43)	
SCALE: 1" = 8'	DATE: FEB. 13, 2015
BECK & BELLUCCI, INC. FRANKLIN, NEW HAMPSHIRE	